

IMPORTANT! UNIVERSAL APPLICATIONS

The customer is responsible for determining the suitability of these parts. Any needed modification to the parts or car is completely at the discretion of the owner and/or installer.



REAR SPRING MOUNTS

These frame brackets mount Chassis Engineering Slider Springs. Kit includes right and left front and rear spring hanger brackets. Requires welding

AS-0010 Rear spring mounts. \$115.00



REAR END MOUNTING KIT

This universal kit Includes the above spring mounts with (4) U-bolts with nuts, specially valved shocks, shackles, lower shock mounts (upper not furnished) and Chassis Engineering Slider Springs. Fitting and welding is required.

AS-0010C Rear end mounting kit \$540.00

Options For Rear End Mounting Kit

- Please specify type of rear end used.
- Specify type of spring, "REGULAR" for normal usage or "HEAVY DUTY" for heavier loads such as sedan delivery. Add \$20.00 for heavy duty spring option.
- Kit comes with specially valved shocks, or if you prefer, gas shocks, if so then state "GAS SHOCK OPTION" and add \$18.00.



STEEL MONO LEAF SPRINGS

Meets or exceeds multi leaf specifications and is only 5/8" thick at the center. It comes with spacers so that it will fit your crossmember and "U" bolts. These spacers may be arranged in different combinations—either above or below the spring. This allows fine tuning of the height of your car in 1/8" increments up to about an inch.


1928-34 Ford Front Spring \$195.00



LEAF SPRING BUTTON SLIDERS

Make your leaf spring into a "Slider". Buttons snap into hole drilled in each spring end. Springs can be drilled by use of slow drill (100 RPM or less).

AU-2060 1-3/4" round slider each \$0.75
 AU-2061 2-1/4" round slider each \$0.75

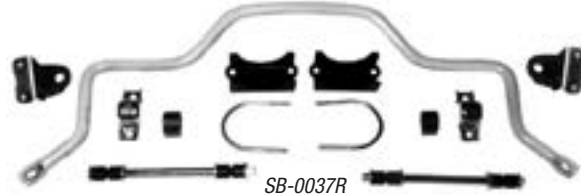

FRONT AND REAR SWAY BARS

This is an excellent way to improve the handling and overall drive-ability of the top-heavy 30s and 40s cars. Eliminates road sway. For best results, use front and rear bars together. Linkage and mounting hardware furnished. Upper linkage mount must be fabricated. If using a Chassis Engineering rear mounting kit, specify axle housing diameter. Front kit fits many stock width Pinto/Mustang IFS kits and swaps.

SB-0037R Rear sway bar kit \$165.00
 SB-0010PM Front sway bar kit \$155.00



BULKHEAD FITTINGS

Takes the brake line thru the frame rail instead of around it. Stainless Steel with 1/8" pipe fittings on both ends.

AU-0071 Bulkhead Fittings- for 2" thick frame rail . . \$45.00



NO. 3 STAINLESS STEEL BRAKE LINES

AU-0014 12" \$18.00
 AU-0016 15" \$19.00
 AU-0018 18" \$20.00
 AU-0022 22" \$22.00